



## Features

- Heater to rapidly recover after rainfall
- Accurate switching
- Directly Interfaces with AX-WLD2 Range

## **Product specifications**

Housing:	Material:	ABS
	Dimensions:	73 x 45 x 32mm maximum
Bracket:	Material:	Stainless Steel
Country of Origin:		UK

## Installation

1. Fix the AX-WRS1 in a suitable location, with suitable screws through the bracket.

2. Angle the sensing head so the exposed detection plate is best suited to receive rainfall.

3. Terminate the cable cores in a terminal block, housed within a suitable junction box.

4. From the junction box connect the cable to the AX-WLD2 alarm module and terminate the red and blue wires to the sensor input (polarity independent), and the yellow and green to a 24Vac/dc supply (if required).

Product overview

recovery from rainfall.

5. Power the AX-WLD2, and adjust the relevant pot on the PCB anti-clockwise until the relevant LED illuminates, and then clockwise until the LED extinguishes.

6. Test the sensor by placing a damp cloth over the detection plate. The AX-WLD2 relay will indicate an alarm.

7. Remove the cloth, and check the relay de-energises.

Please note: Failure to use the AX-WRS1 with an AX-WLD2 will result in premature failure of the unit, and will not be covered by warranty.

## Connections

Wire Colour	Termination
Red	To AX-WLD2 (Polarity Independent)
Blue	To AX-WLD2 (Polarity Independent)
Yellow	Heater - 24Vac/dc (40mA max.) If fitted
Green	Heater 0V if fitted
Order codes	

AX-WRS1

Rain Sensor with 1 meter cable

© Copyright Annicom 2017. All Rights Reserved

Annicom Ltd Unit 21, Highview, Bordon, Hampshire. GU35 0AX Tel: +44 (0)1420 487788 Fax: +44 (0)1420 487799 Email: sales@annicom.com Website: www.annicom.com

Issue 1.1 (1/06/2017)

Page 1 of 1

Swivelling Mounting Bracket

The AX-WRS1 rain sensor is part of a range of peripherals that directly interface with the AX-WLD2 range of water leak detection modules.

The WRS1 provides detection of rainfall. An integrated heater prevents false detection alarms resulting from dew forming, and to provide rapid

The supplied mounting bracket features swivel adjustment for best

Made in the UK

positioning, and is held in place by a wing-nut.

This unit must be used with an AX-WLD2 module.

• 3 Year Guarantee